

USER MANUAL



G02

www.fslscoreboards.com

info@fslscoreboards.com

+44 (0)28 8676 6131



Sports Technology Solutions

Discover more at www.fslscoreboards.com

know the score...

 
1) Scoreboard connections:

- The scoreboard should be supplied with a 230V mains supply.
- The mains supply should be fed through a 5 amp circuit breaker and it is highly recommended that the supply should be fed through a Residual Current Device (RCD)
- If the scoreboard has been supplied with a separate aerial this should be mounted as high as possible


2) On Power Up:

- 'Sync' will be displayed briefly (*this is the display syncing with the real time clock*)
- 'Cd - ' will be displayed for 5 seconds
 - This is a "code" number stored in memory
- The scoreboard will now go into normal operation, displaying scores with the clock blanked.


3) Changing Scores:

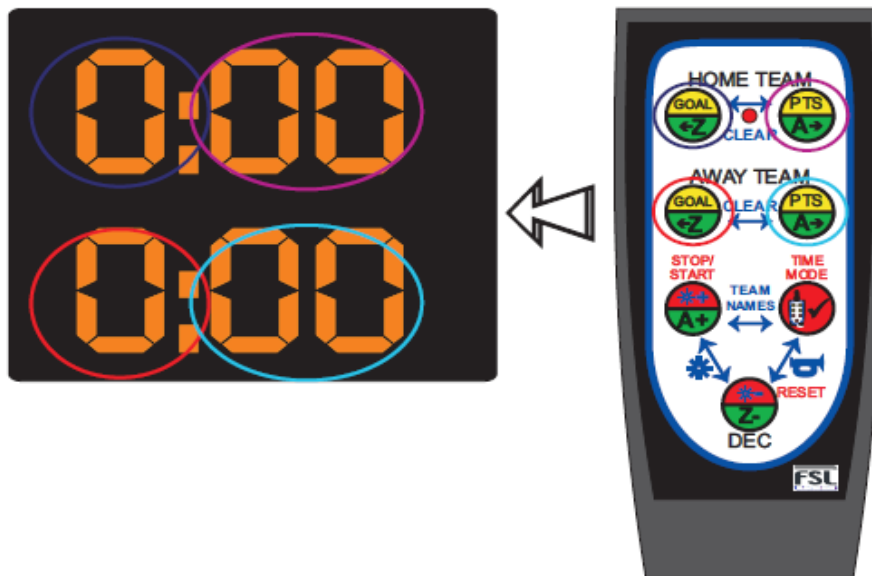

 1) Pressing the appropriate button on the transmitter will increase the corresponding score display by one.

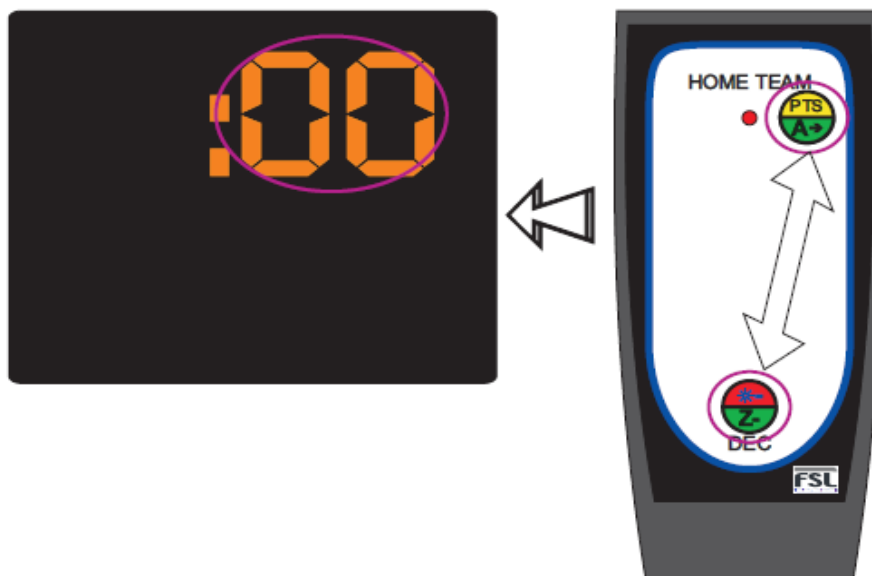

 2) To “Decrease” the score press the “DEC” button and the appropriate score button **together**. The score will decrement by one each time.

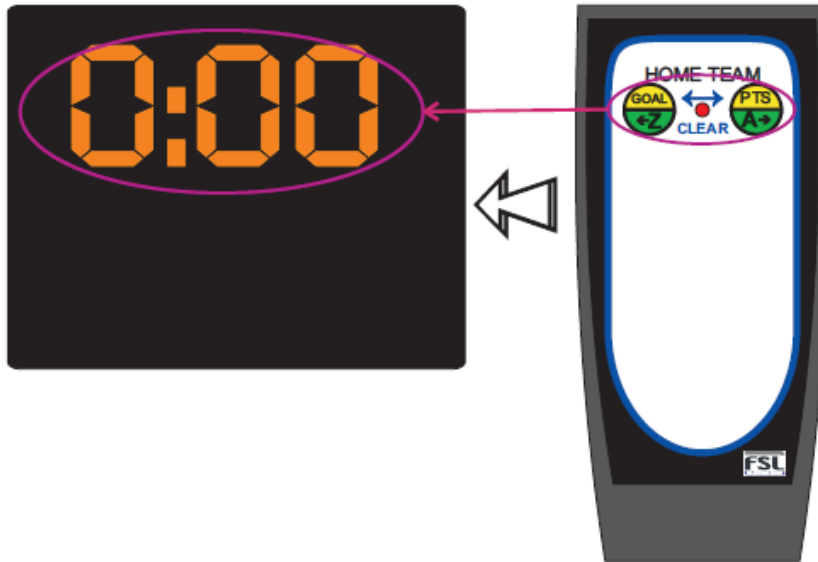

3) To clear the score back to zero press both the “GOAL” & “POINT” together.

 
4) Team name Setting:

The team names will be stored into memory and will be displayed each time the scoreboard is switched on.



To enter team name setup
press  &  switches together

To change the letter to be adjusted press the appropriate button on the transmitter to move the flashing underscore to the right or left
e.g. “T_!” to “TE_” There are separate buttons for the home & away teams

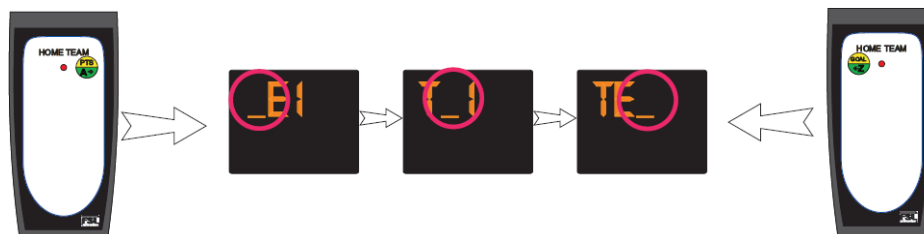

The letter to be changed in the team name will start to flash between the current stored letter and an underscore

e.g. “S” then “_” then “S”



To increase the letter press the button

e.g. “A” then “B” then “C”



To decrease the letter press the button





e.g. “C” then “B” then “A”

 


To store the team names into memory and resume normal operation press & switches together


The display will show all colons as above and then return to normal scoring display

5) Brightness Setting:

- To access brightness setting, hold buttons  &  on the handset together for 3 seconds until 'bl - ' is displayed
- To exit brightness setting, hold buttons  &  on the handset together for 3 seconds until the scores are displayed again

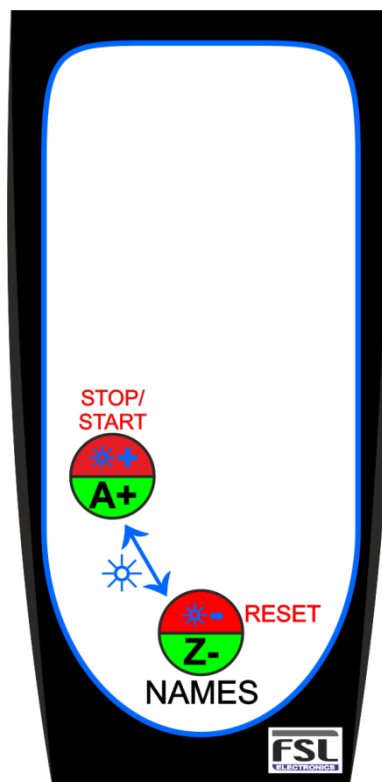


Increasing Brightness:



- While 'bl - ' is displayed, increase brightness with button 
- The maximum brightness is 9



 
Decreasing Brightness:

- While 'bl - ' is displayed, decrease brightness with button 
- The minimum brightness is 0



- To exit brightness setting, hold buttons  &  on the handset together for 3 seconds until the scores are displayed again

6) Scoreboard Blank:

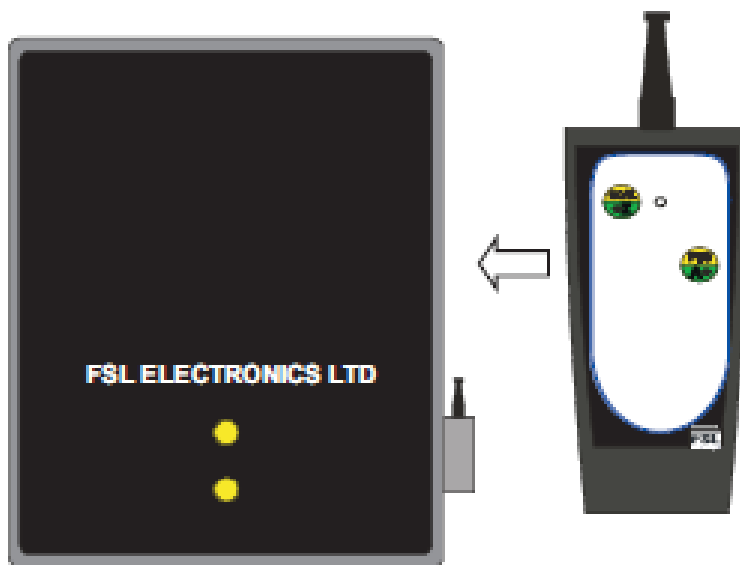

To blank the scoreboard display, press the  & . The score will be restored if any score button is pressed.



FSL ELECTRONICS LTD
SANDHOLES ROAD
COOKSTOWN
CO TYRONE
N. IRELAND
BT80 9AR