

USER MANUAL



M02-CLK4

www.fslscoreboards.com

info@fslscoreboards.com

+44 (0)28 8676 6131



Sports Technology Solutions

Discover more at www.fslscoreboards.com

know the score...


1) Scoreboard connections:

- The scoreboard should be supplied with a 230V mains supply.
- The mains supply should be fed through a 5 amp circuit breaker and it is highly recommended that the supply should be fed through a Residual Current Device (RCD)
- If the scoreboard has been supplied with a separate aerial this should be mounted as high as possible


2) On Power Up:

- 'Cd - ' will be displayed for 5 seconds
 - This is a "code" number stored in memory
 - There are 5 possible codes that may be used, this allows a number of displays to be operated in close proximity of each other
 - Further details on programming the code can be found at the end of the manual
- The scoreboard will now go into normal operation, displaying scores with the clock blanked.



3) Changing Scores:

 
1. To increase the score press the  button







2. To decrease the score press the  button

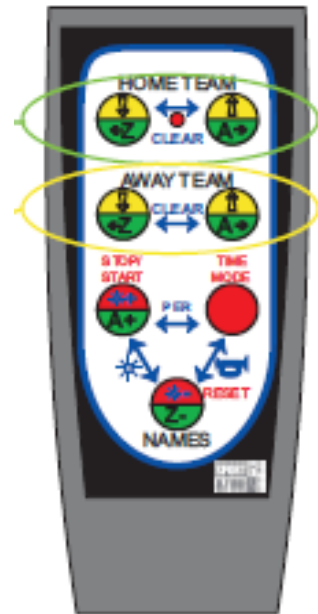


3. To clear the score press the  &  button together




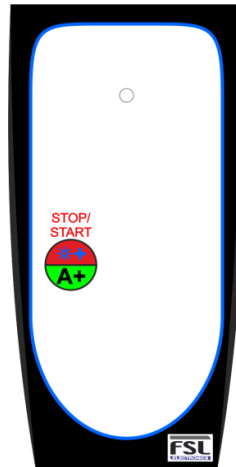
4) Brightness Setting:

- To access brightness setting, hold buttons  &  on the handset together for 3 seconds until 'bl - ' is displayed
- To exit brightness setting, hold buttons  &  on the handset together for 3 seconds until the scores are displayed again

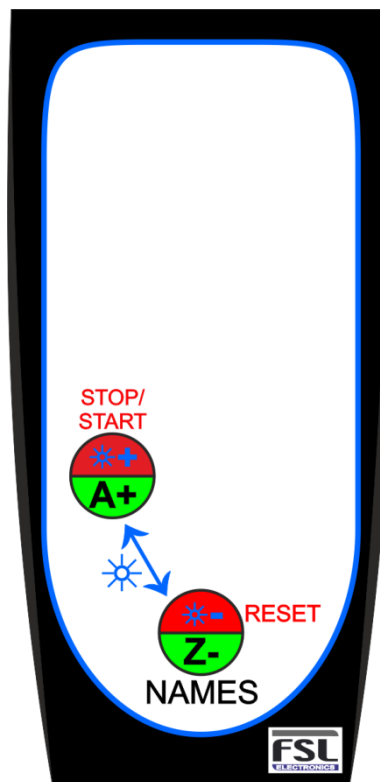


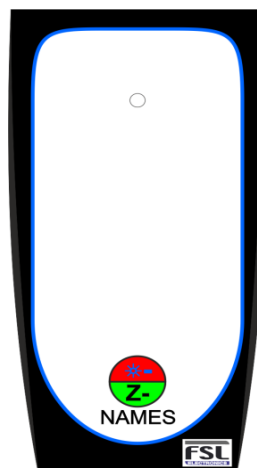
Increasing Brightness:



- While 'bl - ' is displayed, increase brightness with button 
- The maximum brightness is 9




Decreasing Brightness:

- While 'bl - ' is displayed, decrease brightness with button 
- The minimum brightness is 0




- To exit brightness setting, hold buttons  &  on the handset together for 3 seconds until the scores are displayed again

- 6) Scoreboard Blank:

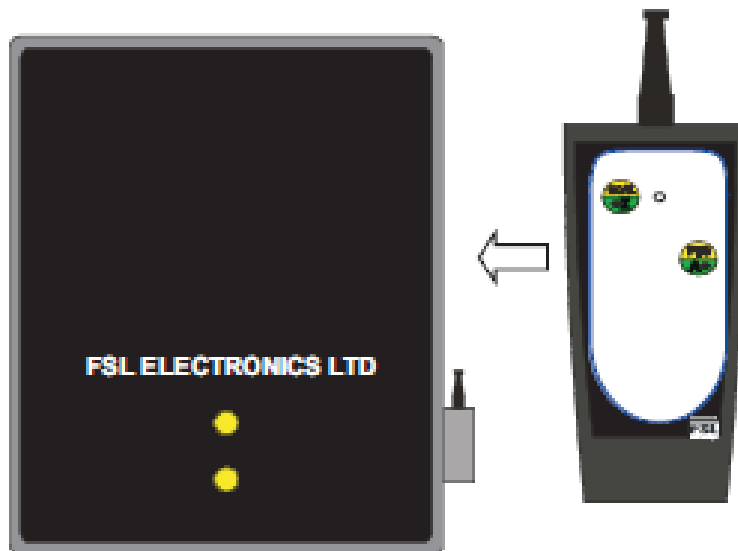



To blank the scoreboard display, press the  &  The score will be restored if any score button is pressed

7) Time Mode Menu:

- To access '**Time Mode Menu**', hold button  for 3 seconds until '**tu**' is displayed



- Pressing button  will scroll through the 3 time menu options, displayed as :
 - '**tu**' – Timer up in minutes and seconds
 - '**td**' – Timer down in minutes and seconds
 - '**bn**' – Blank/clear the clock
- While displaying one of the time options above, holding button  for 3 seconds will go into that corresponding option


NOTE: 'Time Mode Menu' cannot be accessed when brightness is being set


7.1) While in 'tu' (Timer Up in minutes):

NOTE: Defaults to 0 minutes, no setting of timer up is required

- When “Se” then “St” appears on the screen, this indicates to set the start minutes

- Press button  to **INCREASE** the minutes

- Press button  to **DECREASE** the minutes

- Hold down the button  for 3 seconds, until “Se” then “SP” appears on the screen, using the same increase and decrease button, set the Stop time.

- To store and display the '**Timer Up**', hold button  for 3 seconds


- Press button  to **START/STOP** the timer





- **ONLY** if timer is STOPPED press button **RESET** to **RESET** the timer to what it was previously set

While displaying the '**Timer Up**', hold button  for 3 seconds to go into the '**Time Mode Menu**' again

7.2) While in 'td' (Timer Down in minutes):



- The timer setting that can be changed will flash
- Press button  to switch through minutes and seconds setting

- Press button  to **INCREASE** the minutes/seconds

- Press button  to **DECREASE** the minutes/seconds




- To store and display the '**Timer Down**', hold button  for 3 seconds

- Press button  to **START/STOP** the timer
- **ONLY** if timer is STOPPED press button  **RESET** to **PRESET** the timer to what it was previously set

*While displaying the '**Timer Down**', hold button  for 3 seconds to go into the '**Time Mode Menu**' again*

7.3) While in 'bln' (Blank Clock):

NOTE: Defaults to clearing the clock

*While displaying the '**Blank Clock**', hold button  for 3 seconds to go into the '**Time Mode Menu**' again*



FSL ELECTRONICS LTD
SANDHOLES ROAD
COOKSTOWN
CO TYRONE
N. IRELAND
BT80 9AR
+44(0)28 86766131
www.fslelectronics