



**Sports
Solutions**

+44 (0)28 867 66131 | www.fslscoreboards.com



Instruction Manual

ScoreLink

Check
our website
for more details

www.fslscoreboards.com

know the score..
www.fslscoreboards.com



Equipment Supplied:


Scorelink Console
3.5mm Jack to 3.5mm Jack
Micro-USB Charger Cable

What you need:

ECB Play Cricket Scorer App (Available from the App Store/Play Store) or PCS Pro for Windows from ECB site

Checks:

Establish that the console has connection for a PCS Cable, as shown in picture below. (If the PCS Socket is not on the back of the console then it will need to be returned to be installed).

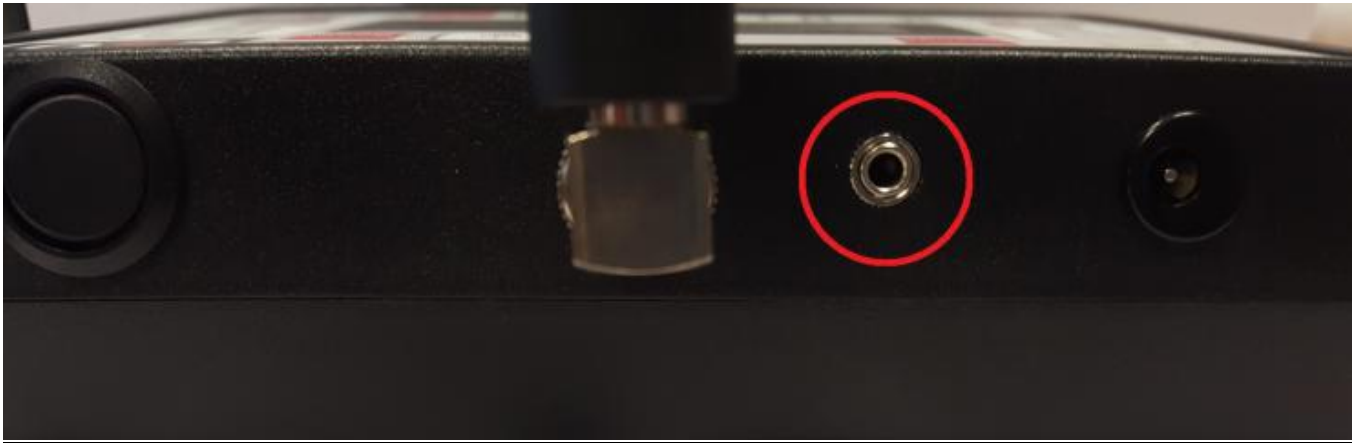**LED Signals:**

Red = Heartbeat Signal (Working Correctly)
Amber = Charging (Light will de-activate when battery is fully charged)
Blue = Bluetooth (Blue light indicated a Bluetooth connection is made successfully)
Green – Power ON

Charging:

Plug the USB Lead into your ScoreLink, using either a Laptop/PC or USB Plug to charge the ScoreLink.
The ScoreLink can be used while charging as normal.

Getting started


1. Connect one end of the 3.5mm Jack cable to the Scorelink box and the other end to the PCS Connection on the Cricket Console.
2. Turn ON the Scorelink box by pressing the Green Power button for 2 seconds. (The yellow light will blink in the centre).
3. Switch ON the Cricket Console.

If you wish to use **PCS Pro**, connect the Scorelink to the laptop using the USB Cable.


To turn the Scorelink OFF, hold the power button for 5 seconds, until LED's flash, and Heartbeat De-activates.

To use the scorelink with the App (Iphone/Android/Tablet with Bluetooth


1. Open the 'Play Cricket' App.

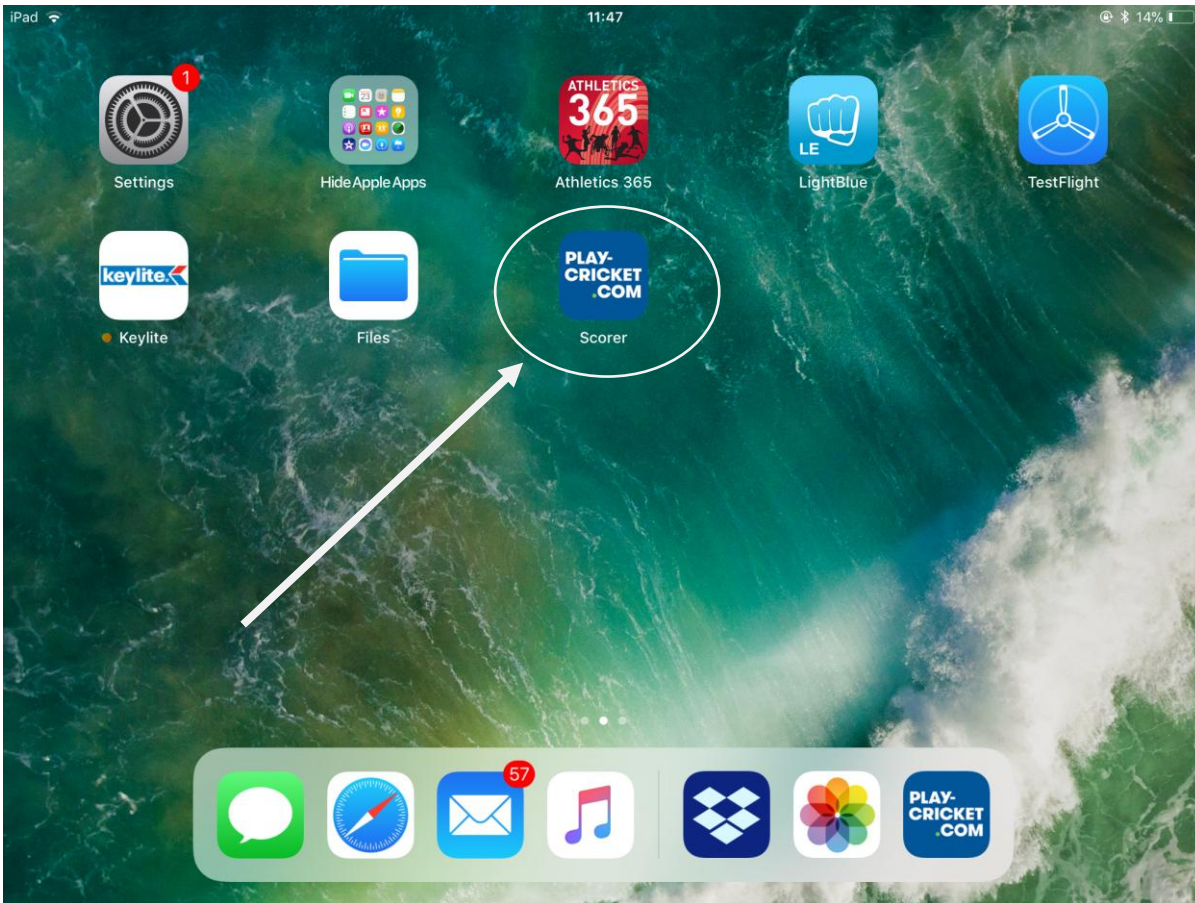


2. Select 'External Scoreboard' and set to 'ON'

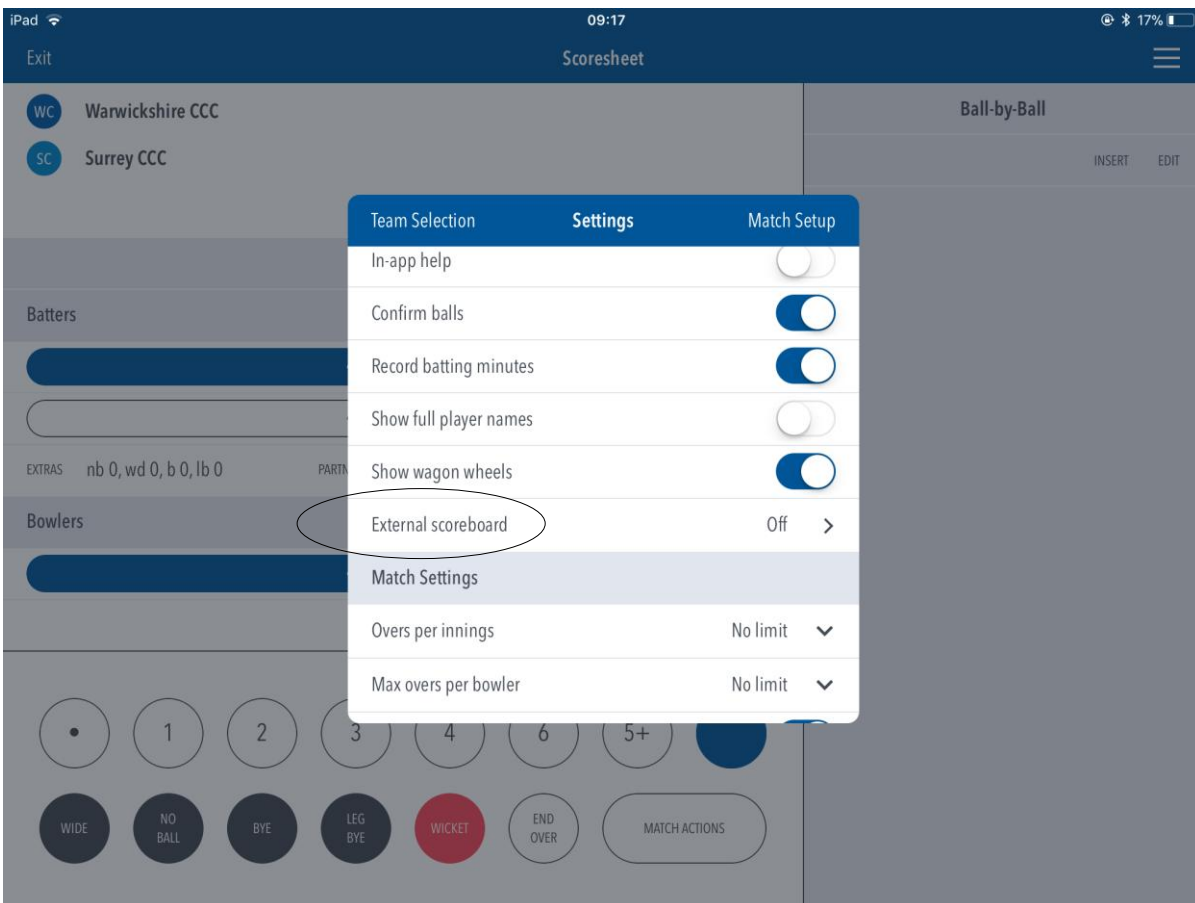


3. Select 'Device'

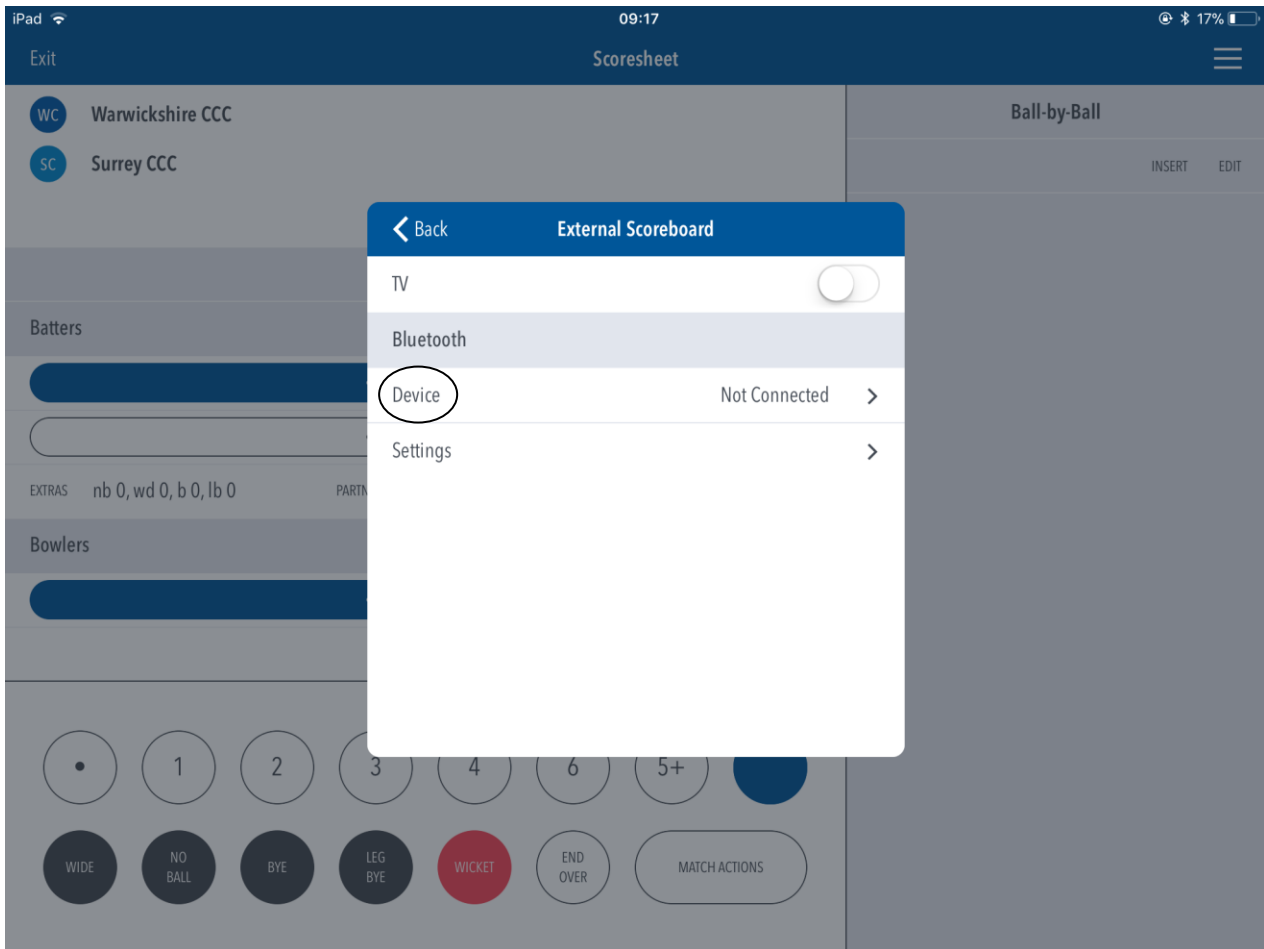


4. Select Scorelink (LED above the Power ON button will flash blue indicating Bluetooth connectivity).

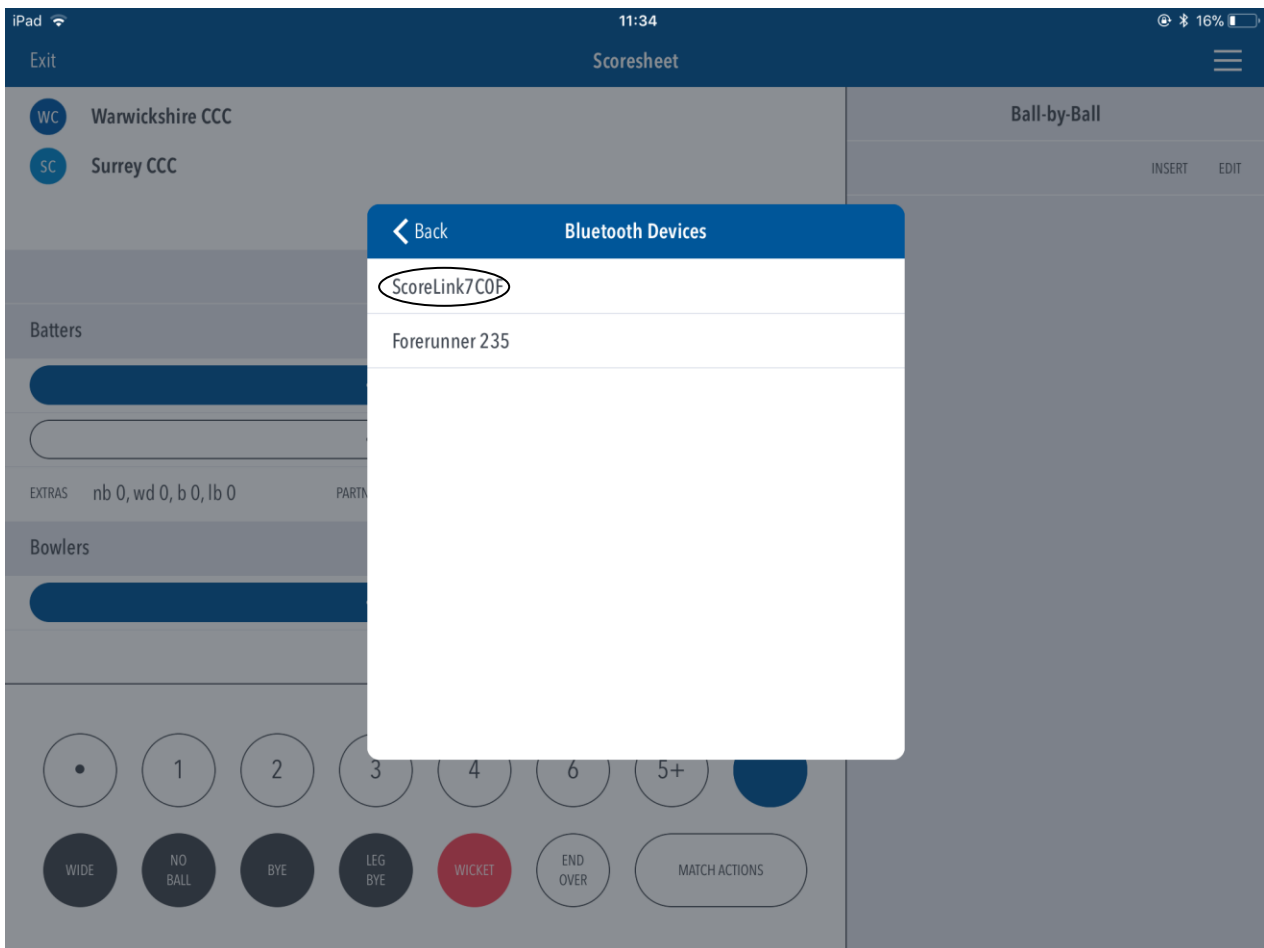

5. Select Back

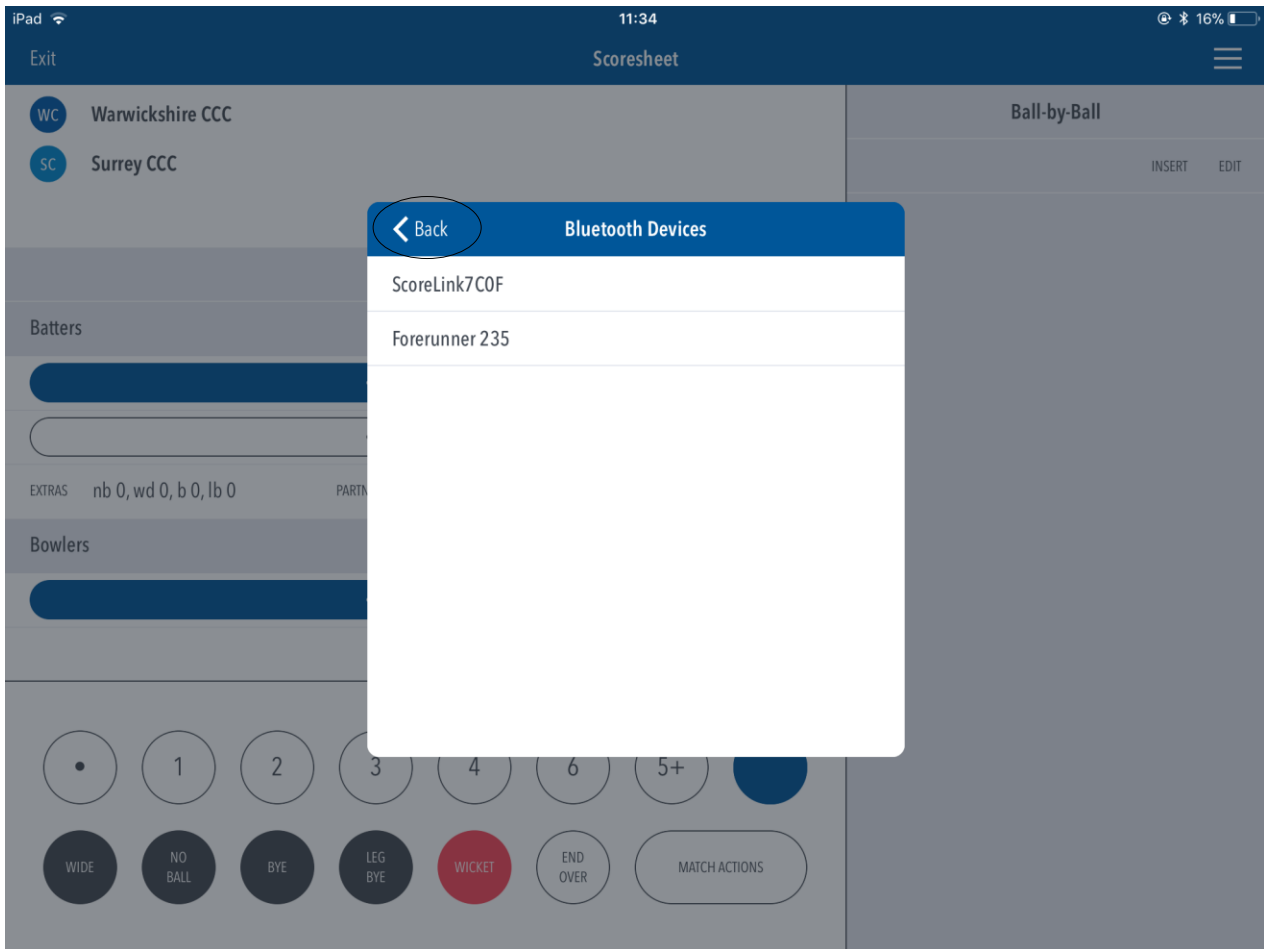


6. Now score the match as usual – please refer to PCS instructions

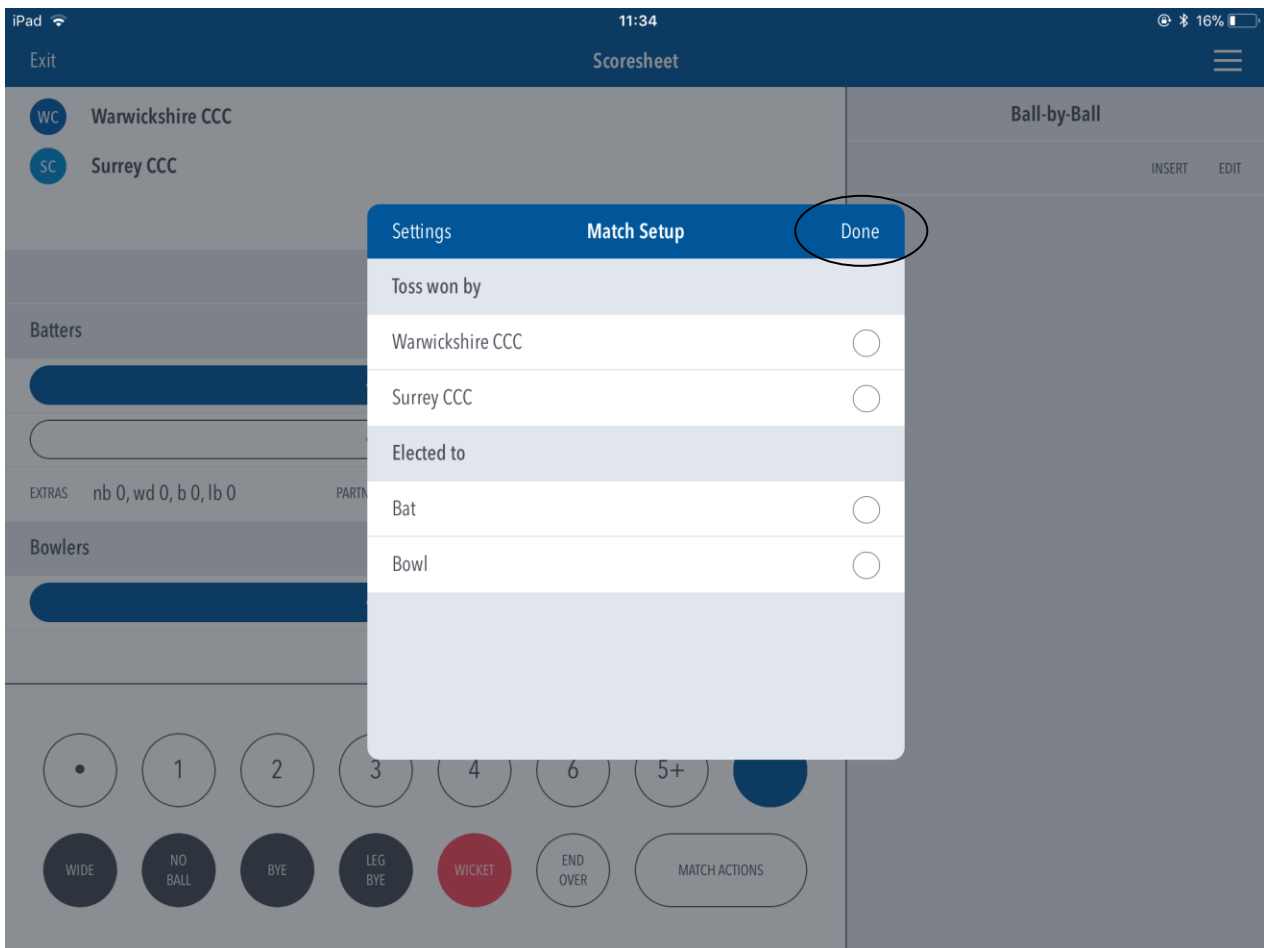

To use the Scorelink with PCS Pro

If you wish to use **PCS Pro**, connect the Scorelink to the laptop using the USB Cable.

- 1) You first need to enable LED Scoreboards by using this simple dialogue page (below) accessed via <Tools><Configuration><Scoreboard>. The Other Output files 1 and 2 should be disabled (remain unchecked).

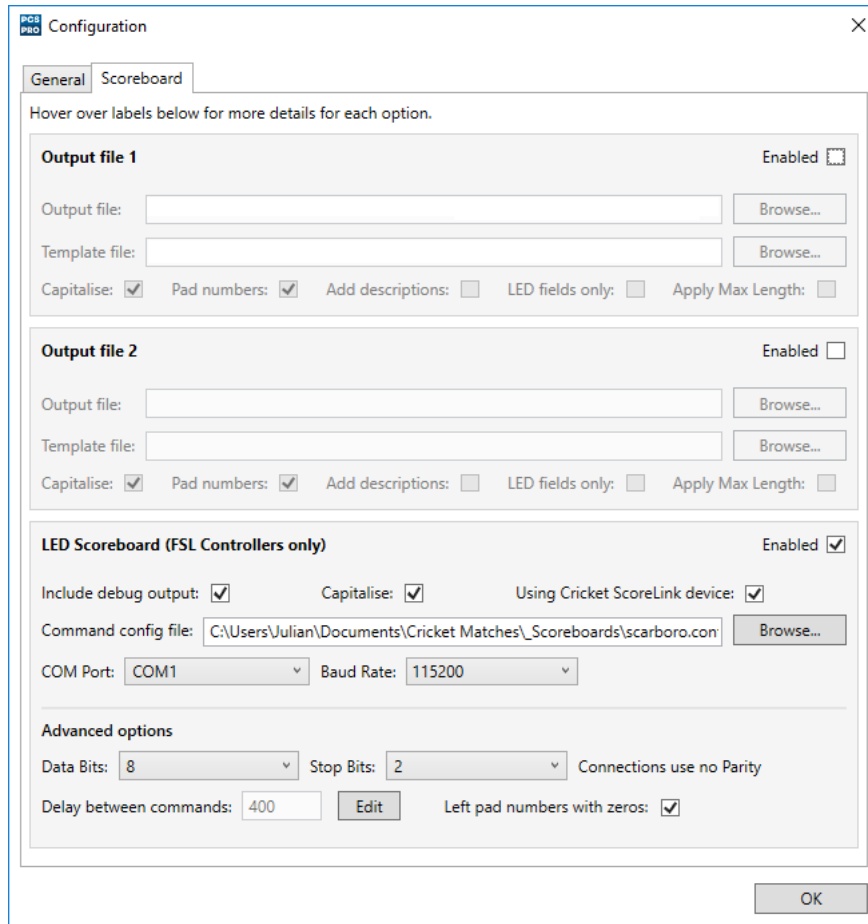

The screenshot shows the 'Configuration' dialog box for PCS Pro, with the 'Scoreboard' tab selected. The dialog is titled 'Configuration' and has a close button (X) in the top right corner. It contains several sections for configuring the scoreboard output.

General | **Scoreboard**

Hover over labels below for more details for each option.

Output file 1 Enabled

Output file: Browse...

Template file: Browse...

Capitalise: Pad numbers: Add descriptions: LED fields only: Apply Max Length:

Output file 2 Enabled

Output file: Browse...

Template file: Browse...

Capitalise: Pad numbers: Add descriptions: LED fields only: Apply Max Length:

LED Scoreboard (FSL Controllers only) Enabled

Include debug output: Capitalise: Using Cricket ScoreLink device:

Command config file: Browse...

COM Port: Baud Rate:

Advanced options

Data Bits: Stop Bits: Connections use no Parity

Delay between commands: Edit Left pad numbers with zeros:

OK



- 2) Check the Using Cricket Link device box and set the baud rate to 115200.
- 3) You will need to set the COM port to the correct number. To ascertain the correct COM port, go to Windows Device Manager, select Ports (COM & LPT) and look for USB serial port (COM xx) and xx should be the COM port that you select from the dropdown box. If it isn't already set, click on the Edit button next to the Delay between commands setting and change it to 400.
- 4) By default the scoreboard will be set up for the latest controller software version 5.5. If you have version 5.4 which has bowler numbers click on the browse button and select the alternative config file called fsl-led-scoreboard-with-bowler-categories.config.
- 5) Close the dialogue and score as usual. You may have to exit the program and restart to apply the changes.

To finish

1. Press and Hold the green Power ON button until LED Light turns green, then release.(the Scorelink will then Power Down).
2. Turn off the cricket console and remove PCS leads from console and Scorelink.



ScoreLink

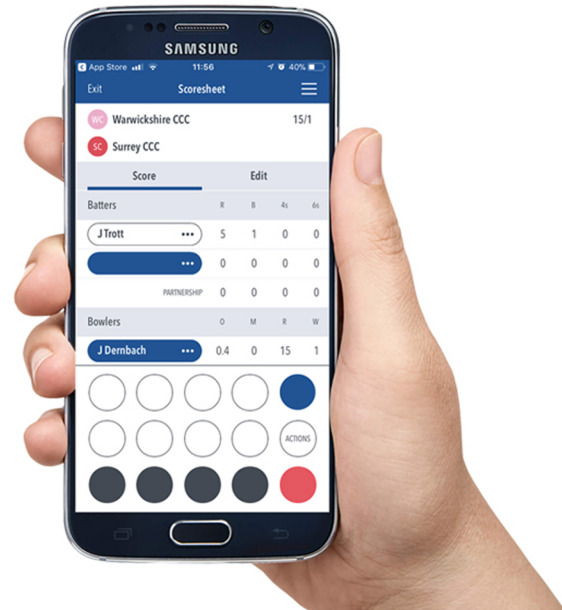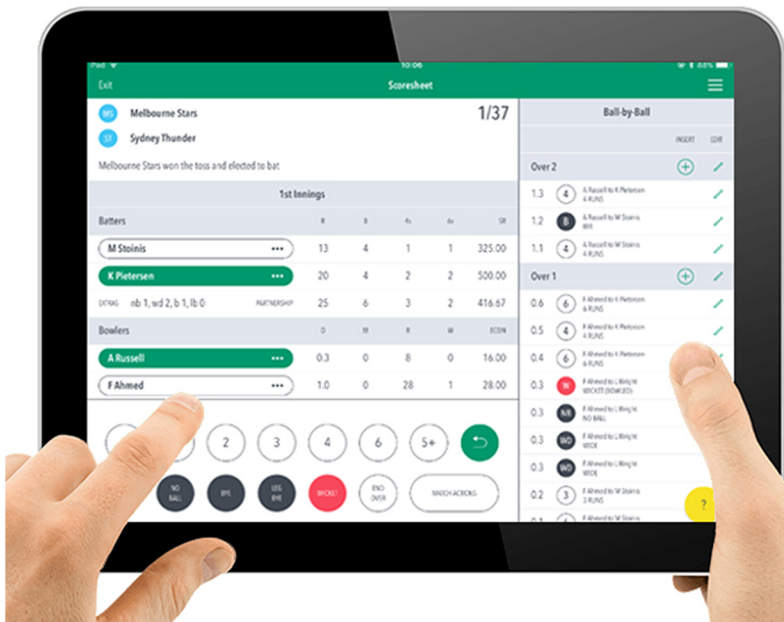

Check our website for more details
www.fslscoreboards.com

know the score..
www.fslscoreboards.com