
Learning Handset into Scoreboard

1. Switch off power to the scoreboard.
2. Press and hold any of the scoring buttons on the handset.
3. While pressing the buttons on the handset, power on the scoreboard.
4. You will see the “CD-“ displayed on the scores before the scores are fully displayed. During this period keep the button pressed on the handset.
5. The default code for no paired remotes is “CD-0”. When a remote is paired, the zero will change to the remote code, typically 1 (Other codes may apply, e.g. 9, F1, F2).
6. Your remote should now be paired.

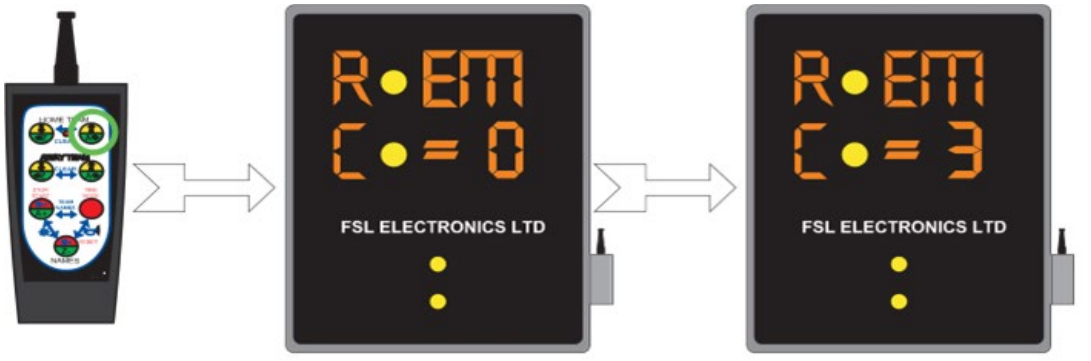

Push & hold score button

Switch on power to scoreboard

Scoreboard will display old code

Scoreboard will learn and store new code

New code will be display.
Scoreboard will resume normal operation